

EQUIPMENT EXPRESS: Karaoke



1. Open the Duffel Bag and Remove the Speaker

- a. Lay the duffel bag flat with the Olympia logo facing up (see Photo 1) and remove the handles from the Velcro strap.
- b. Unzip the large zipper (see Photo 1) and pull the top back to expose the speaker (see Photo 2).
- c. Remove the speaker from the bag.



2. Remove and Set Up the Microphone

The microphone and XLR microphone cable are located inside zipped compartments in the top of the duffel bag.

- a. Unzip the two compartments and remove the cable and microphone (see Photo 3).
- b. Align the pins and attach the XLR microphone cable to the microphone (see Photo 4).

EQUIPMENT EXPRESS: Karaoke



- c. Align the pins and attach the XLR microphone cable to the MIC INPUT on the back of the speaker (see Photo 5).

2. Set Up the Speaker

The speaker power cable is located inside a zipped compartment near the pull handle of the duffel bag (see Photo 6).





- a. Align the pins and plug the power cable into the speaker (see Photo 7).
- b. Plug the power cable into an electrical outlet.
- c. Turn the speaker POWER on (see Photo 8).

EQUIPMENT EXPRESS: Karaoke



- d. Click the speaker MODE button until the indicator displays bt (see Photo 9).
- e. Set all of the VOLUME dials to the middle (see Photo 10).

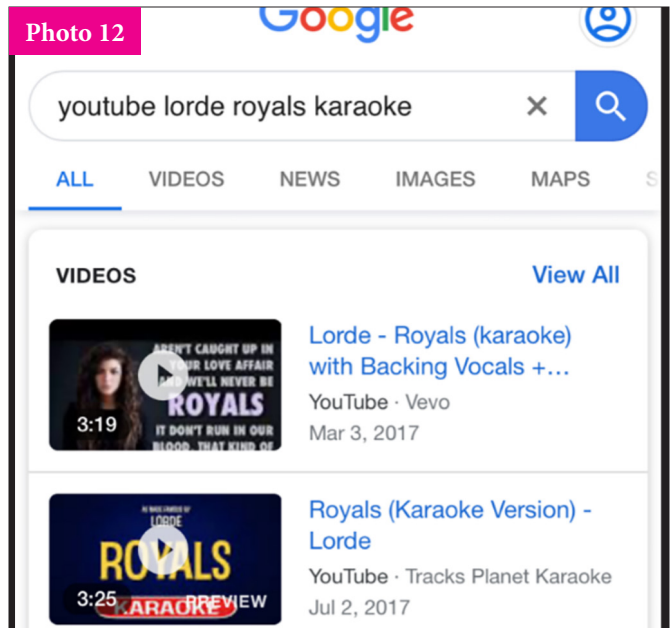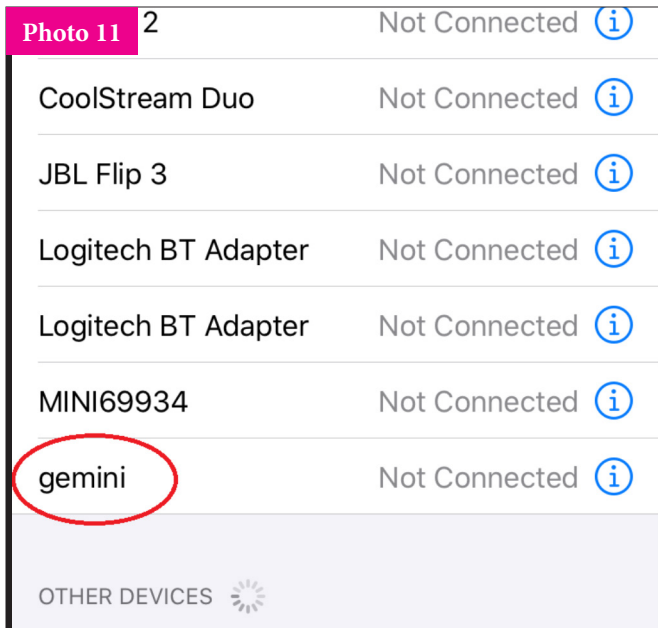

3. Set Up and Use Your Device

- a. On your device, go to Settings, Bluetooth and select DEVICE “gemini” (see Photo 11).
- b. Find a karaoke video and click play (see Photo 12).