

VHS to Digital Conversion

GLEN ELLYN
PUBLIC
LIBRARY

Disclaimer: The passage of time and the challenges associated with aging technology makes it difficult to guarantee the quality of digitized audio-visual materials. **If you have concerns about the compatibility or durability of your tape, please consult an audio-visual restoration or preservation professional.**

PREPARE


1. Connect the equipment as shown in the photo.
2. Insert your tape into the VCR. Insert your flash drive into the conversion device.

RECORD

3. Press the PLAY button on the VCR (see photo) at the same time you press the button with the red dot on the conversion device (see photo). When the video ends, press the red button on the conversion device to stop recording.

REMOVE

4. Wait a moment to be sure that the video saved to the flash drive. Remove the flash drive from the conversion device and remove the tape from the VCR.

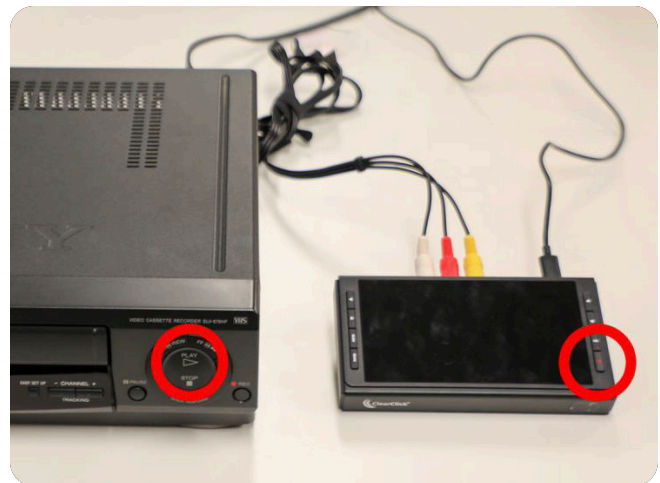

Questions? Contact Technology Services at 630-423-6664.