

# VHS-C to Digital Conversion

GLEN ELLYN  
PUBLIC  
LIBRARY

Disclaimer: The passage of time and the challenges associated with aging technology makes it difficult to guarantee the quality of the digital video. **If you have concerns about the compatibility or durability of your tape, please consult an audio-visual restoration or preservation professional.**

## PREPARE


1. Connect the equipment as shown in the photo.
2. Insert your tape into the camcorder and slide the camcorder power switch to the VCR position. Insert your flash drive into the conversion device.

## RECORD

3. Press the PLAY button on the top of the camcorder (see photo) at the same time you press the button with the red dot on the conversion device (see photo). When the video ends, press the red button on the conversion device to stop recording.

## REMOVE

4. Wait a moment to be sure that the video saved to the flash drive. Remove the flash drive from the conversion device and remove the tape from the camcorder.

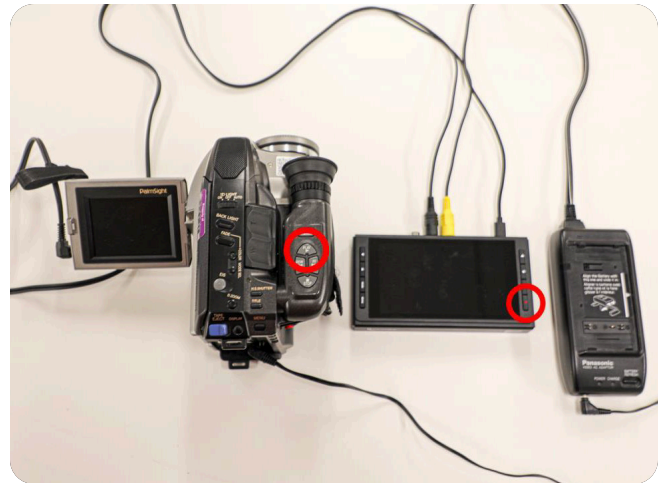

Questions? Contact Technology Services at 630-423-6664.